# **Enrolling Your Chrome Device**

One Time Setup Guide



#### Before You Get Started...

#### You'll need to have ready

Hardware You Are Activating	To Access the Internet WiFi/LAN crednentials	Wired (USB) Keyboard	Wired (USB) Mouse	HDMI Cord
Chromebox	<b>✓</b>		✓	✓
Mini Kiosk	<b>✓</b>	<b>✓</b>	optional	✓
Kiosk			optional	×



- Plug Chrome device in (for Chromebox and Mini Kiosk users connect HDMI cord to TV Display)
- Device will boot up to network Wi-Fi settings screen
- Do not sign in to device (yet)
- Set Up appropriate Wi-Fi network
- Device will walk you through steps to update software, firmware and accept terms
- Next step is critical




 When this screen appears, do nothing. Let the software load automatically.

do not press Ctrl+Alt+S as instructed






- When prompted to sign in, FIRST hold Ctrl+Alt+E
- If done correctly, your sign in should say 'Enterprise Enrollment' and should appear like picture (at right)

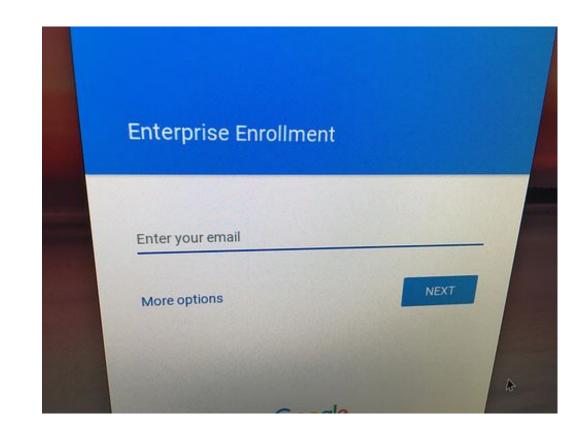



- Enter email as enroll@functional.fitness
- Click 'Next'
- Enter the password (case sensitive)

Functional 2017

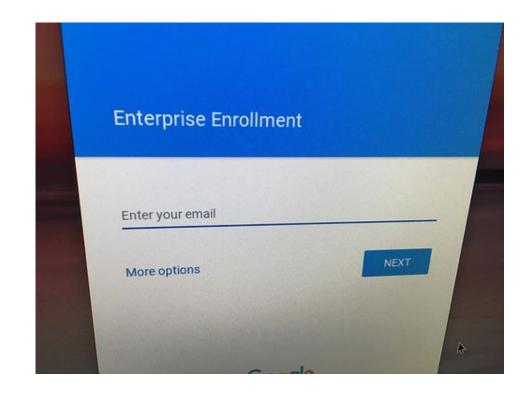



# Step 5 (Chromebox and Tablet Only)

 Once you have enrolled your Chrome device, unplug the device and let it reboot to Chrome login screen





# Step 6 (Chromebox and Tablet Only)

 Once the device reboots, type Ctrl+Alt+S to enter the settings mode





# Step 7 (Chromebox and Tablet Only)


• From the main screen, locate the Settings menu in the lower right corner and click anywhere within the menu





# Step 8 (Chromebox and Tablet Only)

 From the Settings menu, select 'Manage Displays' and choose 'Mirrored' option

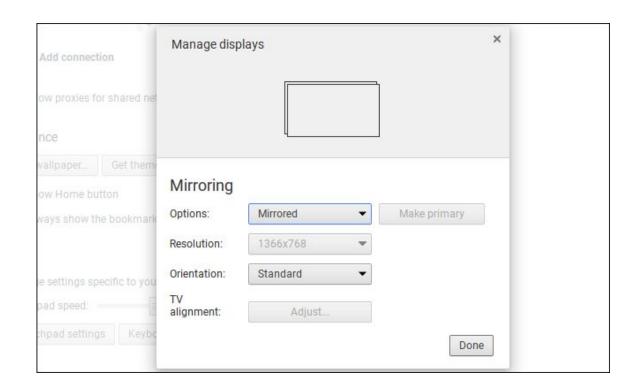



#### Step 9: Contact Us

 Once you have successfully completed the device enrollment, please notify FS Support to associate your device(s) to your FS Software.

